



Locking Drawer Instructions for Pow-R-Pax Tables


Included Items:



Drawer Assembly




Hardware & Key Set

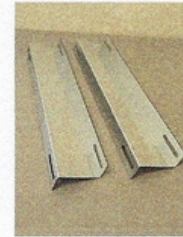

Mounting Rails (2)

Assembly Instructions:

1. Attach the two mounting rails using the 4 bolts & nuts provided with the upper wings pointing outward. →
2. Carefully remove the **knock-out*** in the upper right panel of the drawer front with a sharp punch or chisel.
3. Insert the key into the lock. While holding the outer ring of the lock, turn the key clockwise so it points to the right.

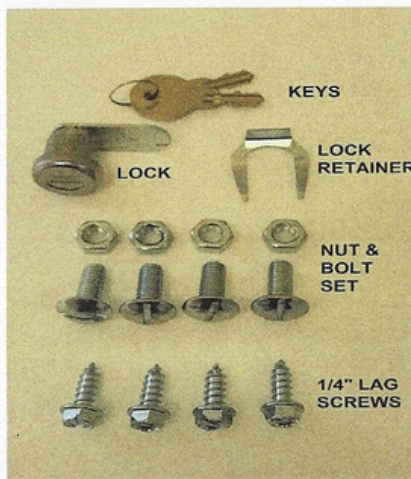

4. Insert the lock barrel into the hole from the front with the locking tab pointing to the right, slide the lock retainer into the two grooves in the lock barrel to securely fasten it in place.
5. Place the drawer assembly under the table behind the side apron and mark the location of the holes on underside of the table with a Sharpie or pencil.
6. Take a 5/32" drill bit and wrap tape around the tip 1/2" from the end so you don't drill too deeply.
7. Drill 4 pilot holes where you marked being careful to not drill up through the table.
8. Fasten the drawer assembly to the table with the four 1/4" lag screws.

* Knock-out panel for lock-set



outside view



inside view